


# A系列-爆炸圖


三點式組合

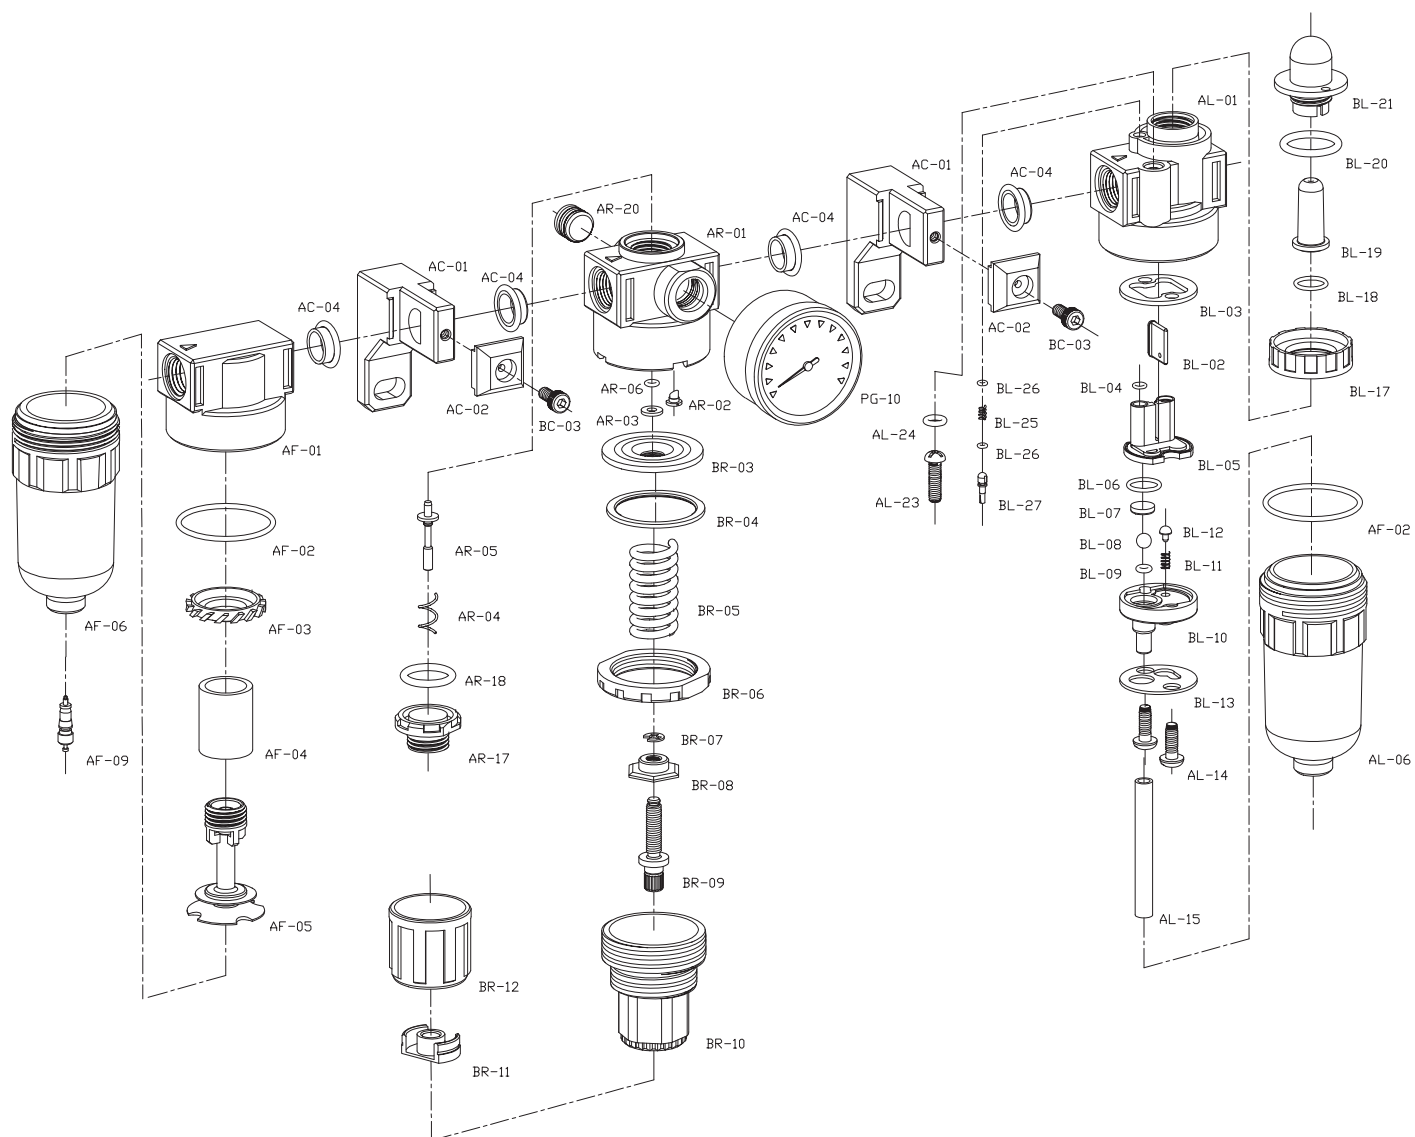

Index No:	Part No:	Description	Price	Index No:	Part No:	Description	Price	Index No:	Part No:	Description	Price
1	AF-01	Filter Body		23	BR-10	Governor Socket		45	BL-11	Spring	
2	AF-02	O-Ring		24	BR-11	Push Button		46	BL-12	Slack Adjustor	
3	AF-03	Spiral Baffle		25	BR-12	Pressure Governor		47	BL-13	Setting up piece	
4	AF-04	Filter Element		26	AR-03	Bush		48	AL-14	Screw	
5	AF-05	Umbrella Baffle		27	AR-04	Spring		49	AL-15	Tube	
6	AF-06	Plastic Bowl		28	AR-05	Spool		50	AL-06	Plastic Bowl	
7				29	AR-06	O-Ring		51	BL-17	Adjusting Ring	
8				30				52	BL-18	O-Ring	
9	AF-09	Valve Cores		31	AR-17	Valve Cap		53	BL-19	Drip pipe	
10				32	AR-18	O-Ring		54	BL-20	O-Ring	
11				33	AR-20	Screw		55	BL-21	Visi-Dome	
12				34	PG-10	Pressure Gauge		56			
13				35	AL-01	Lubricator Body		57	AL-23	Filling plug	
14	AR-01	Regulator Body		36	BL-02	Distance Piece		58	AL-24	O-Ring	
15	AR-02	Exhaust Nozzle		37	BL-03	Packing		59	AL-25	Spring	
16	BR-03	Pressure Packing		38	BL-04	O-Ring		60	BL-26	O-Ring	
17	BR-04	Plastic Ring		39	BL-05	Distance Block		61	BL-27	Enjetor Pin	
18	BR-05	Spring		40	BL-06	O-Ring		62	AC-01	Mounting Bracket	
19	BR-06	Anchor Ring		41	BL-07	Filter Leaf		63	AC-02	Anchor Block	
20	BR-07	E-Ring		42	BL-08	Ball Steel		64	BC-03	Screw	
21	BR-08	Regulating Nut		43	BL-09	O-Ring		65	AC-04	Packing	
22	BR-09	Governor Spindle		44	BL-10	Governor		66			

# A系列-爆炸圖

二點式組合

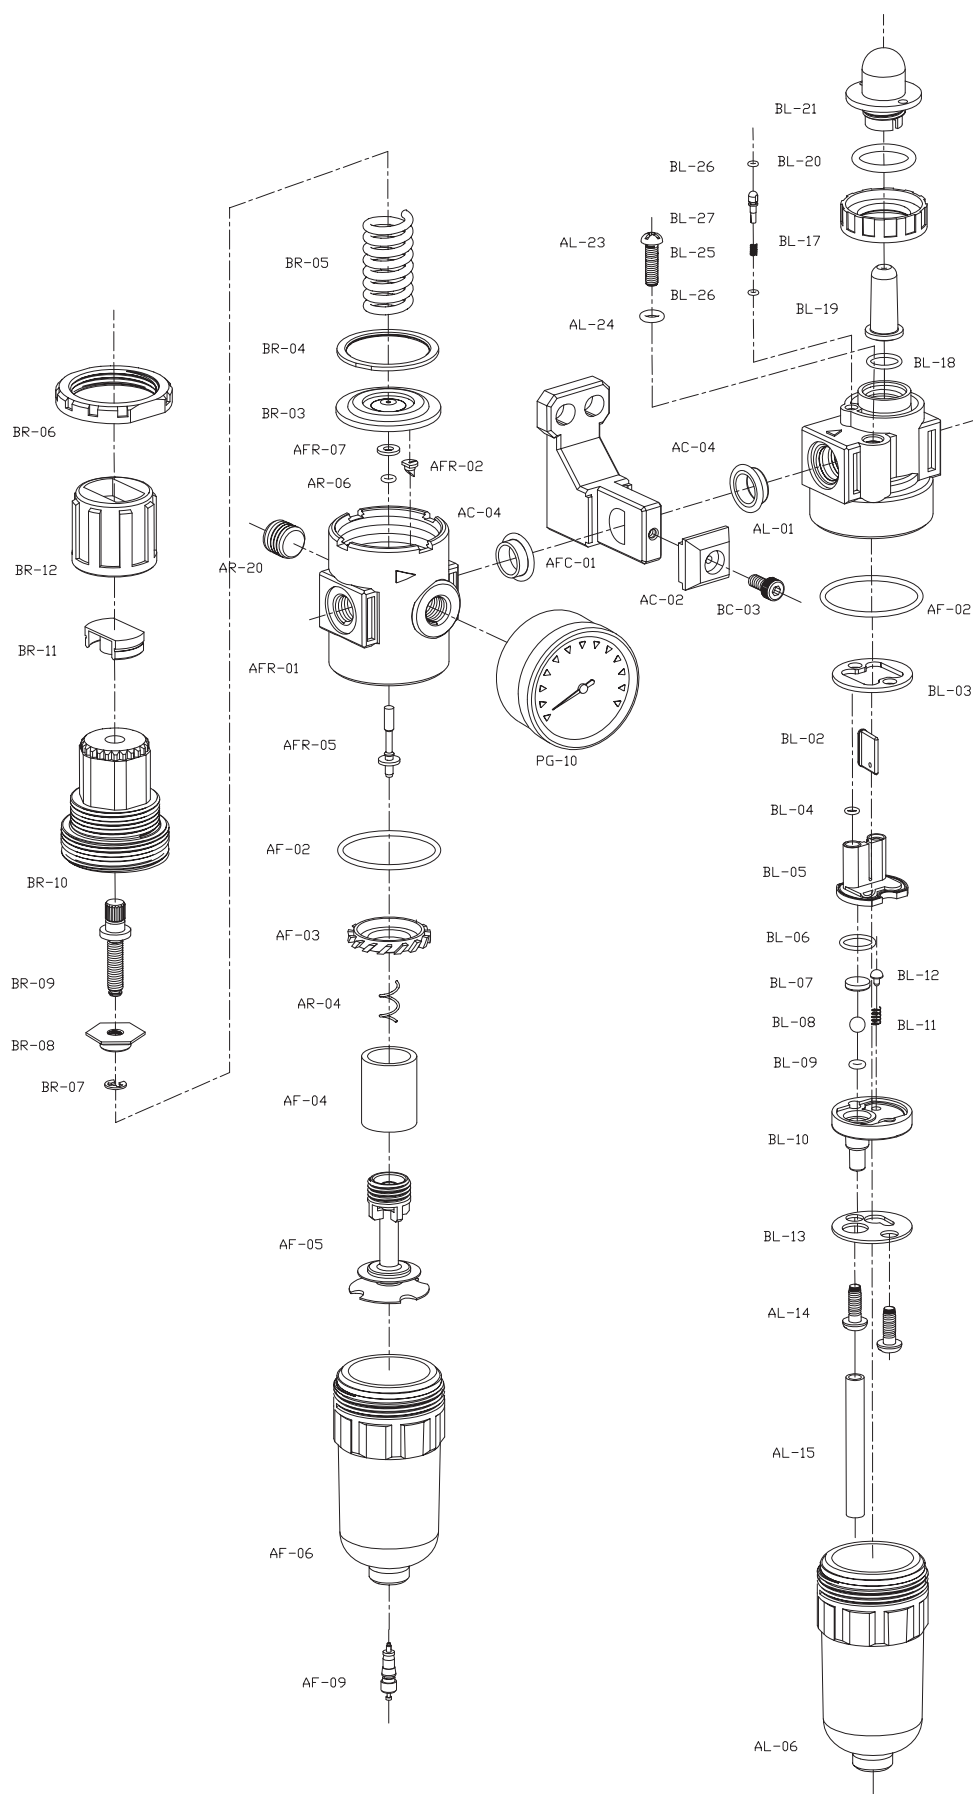

Index No:	Part No:	Description	Price
1	AFR-01	Filter Regulator Body	
2	AF-02	O-Ring	
3	AF-03	Spiral Baffle	
4	AF-04	Filter Element	
5	AF-05	Umbrella Baffle	
6	AF-06	Plastic Bowl	
7			
8			
9	AF-09	Valve Cores	
10	AD-15B	Auto drainer with PC Bowl	
11			
12			
13			
14	AFR-02	Exhaust Nozzle	
15	BR-03	Pressure Packing	
16	BR-04	Plastic Ring	
17	BR-05	Spring	
18	BR-06	Anchor Ring	
19	BR-07	E-Ring	
20	BR-08	Regulating Nut	
21	BR-09	Governor Spindle	
22	BR-10	Governor Socket	
23	BR-11	Push Button	
24	BR-12	Pressure Governor	
25	AR-06	O-Ring	
26	AFR-05	Spool	
27	AFR-07	Bush	
28			
29	AR-04	Spring	
30	AR-20	Screw	
31	PG-10	Pressure Gauge	
32	AL-01	Lubricator Body	
33	BL-02	Distance Piece	
34	BL-03	Packing	
35	BL-04	O-Ring	
36	BL-05	Distance Block	
37	BL-06	O-Ring	
38	BL-07	Filter leaf	
39	BL-08	Ball Steel	
40	BL-09	O-Ring	
41	BL-10	Governor	
42	BL-11	Spring	
43	BL-12	Stack Adjustor	
44	BL-13	Setting up piece	
45	AL-14	Screw	
46	AL-15	Tube	
47	AL-06	Plastic Bowl	
48	BL-17	Adjusting Ring	
49	BL-18	O-Ring	
50	BL-19	Drip pipe	
51	BL-20	O-Ring	
52	BL-21	Visi-Dome	
53	AL-24	O-Ring	
54	AL-23	Filling plug	
55	BL-25	Spring	
56	BL-26	O-Ring	
57	BL-27	Enjetor Pin	
58	AFC-01	Mounting Bracket	
59	AC-02	Anchor Block	
60	BC-03	Screw	
61	AC-04	Packing	